

# 12' Seating Cedar Raised Bed


## Parts Included:

9" long top Corner Triangle Supports- 4  
7" Middle Supports- 2  
Corner Posts-4  
Middle Posts-2  
4' Panels- 14  
6' Panels- 14  
Top Seating Panels- 4  
1 1/2" Screws- 46

1. Setup a corner first. Use the 4' panels and slide 7 of the panels down the corner post's notch to create the 4' width span. Note that each set of panels for each side comes with panels made flat for the bottom and top of the raised bed. Alternately, use the 6' panels and slide 7 of the panels down to create the adjoining perpendicular corner. Starting from the bottom, screw in a 1 1/2" Philip head screw at each alternate panel. Form the rest of the raised bed as described above.



2. The Middle posts will be used to connect the 6' sections together while a cedar support bracket as pictured on the right will be screwed in.

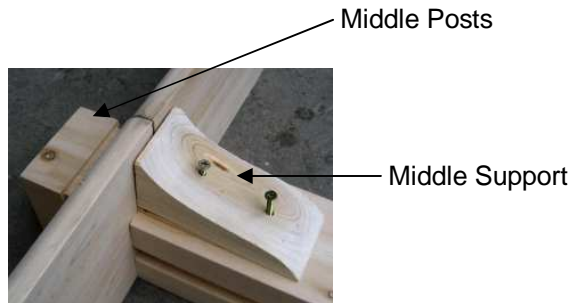

3. After setting up the main frame, the top seating panels will complete the top of the raised bed. Using four screws, screw in the top corner support.

